


HOW TO RESET YOUR EXTERIOR PLUG

*Please note that the reset can be located at any exterior plug

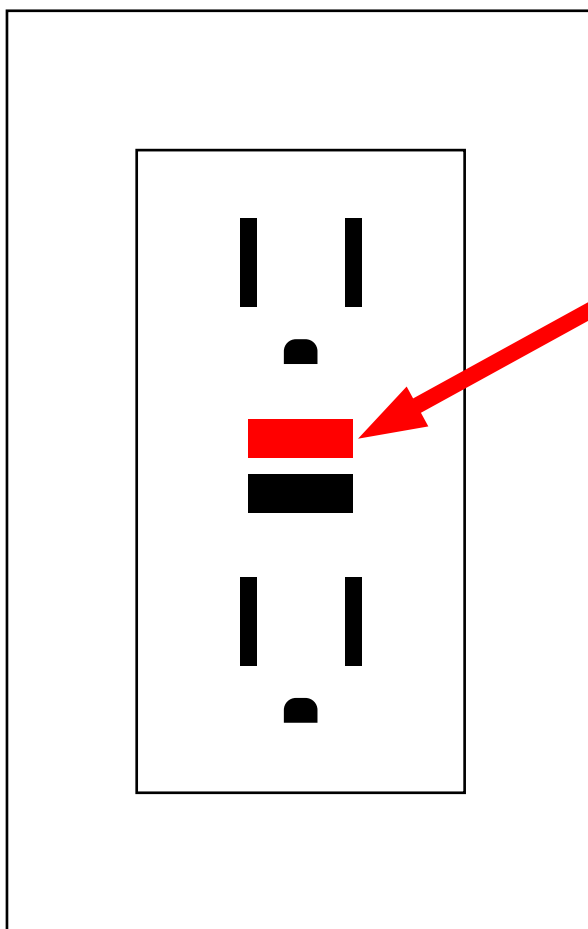

To reset your exterior GFCI plug, simply depress the reset button